


---

# Load Cell

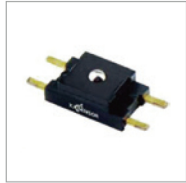

XCK-Y01-05



XCK-Y01-08



XCK-Y01-10



XCK-Y01-12.7



XCK-Y01-9.5



XCK-Y01-12



XCK-Y01-12-W17-B



XCK-Y01-13



XCK-Y01-13-A



XCK-Y01-15



XCK-Y01-19



XCK-Y01-20-4M



XCK-Y01-20-H5



XCK-Y01-20-H6



XCK-Y02-3M



XCK-Y02-4M



XCK-Y03-4M



XCK-Y03-80



XCK-Y04



XCK-Y05



XCK-Y08



XCK-Y08-H30



XCK-Y08-B



XCK-Y11



XCK-Y11-70



XCK-Y18



XCK-Y19



XCK-Y25



XCK-D01



XCK-D02



XCK-D06-B



XCK-D08



XCK-D09



XCK-D150



XCK-D152



XCK-D200